




## Excavator Dredge Pump Attachment

### Pin Linkage Overview

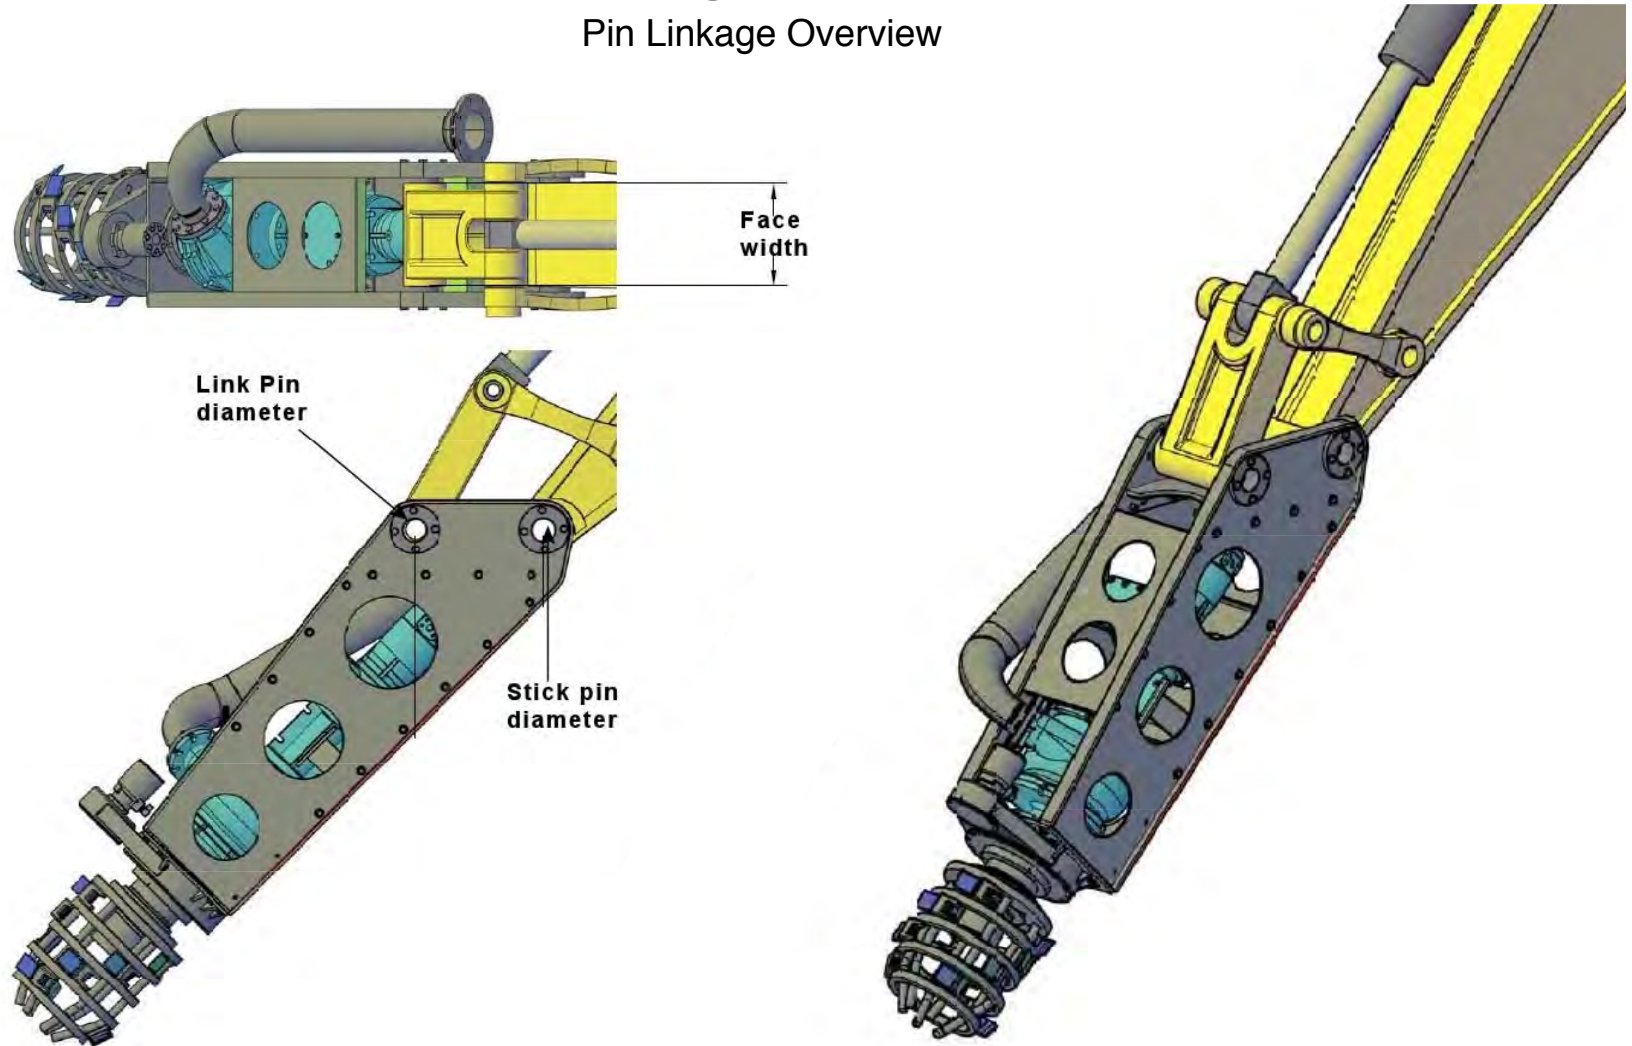


Use the following drawings to determine your pin size in MM. This is important to ensure a correct fit. Contact us if you have questions.



## Excavator Dredge Pump Attachment

### General Assembly Drawing

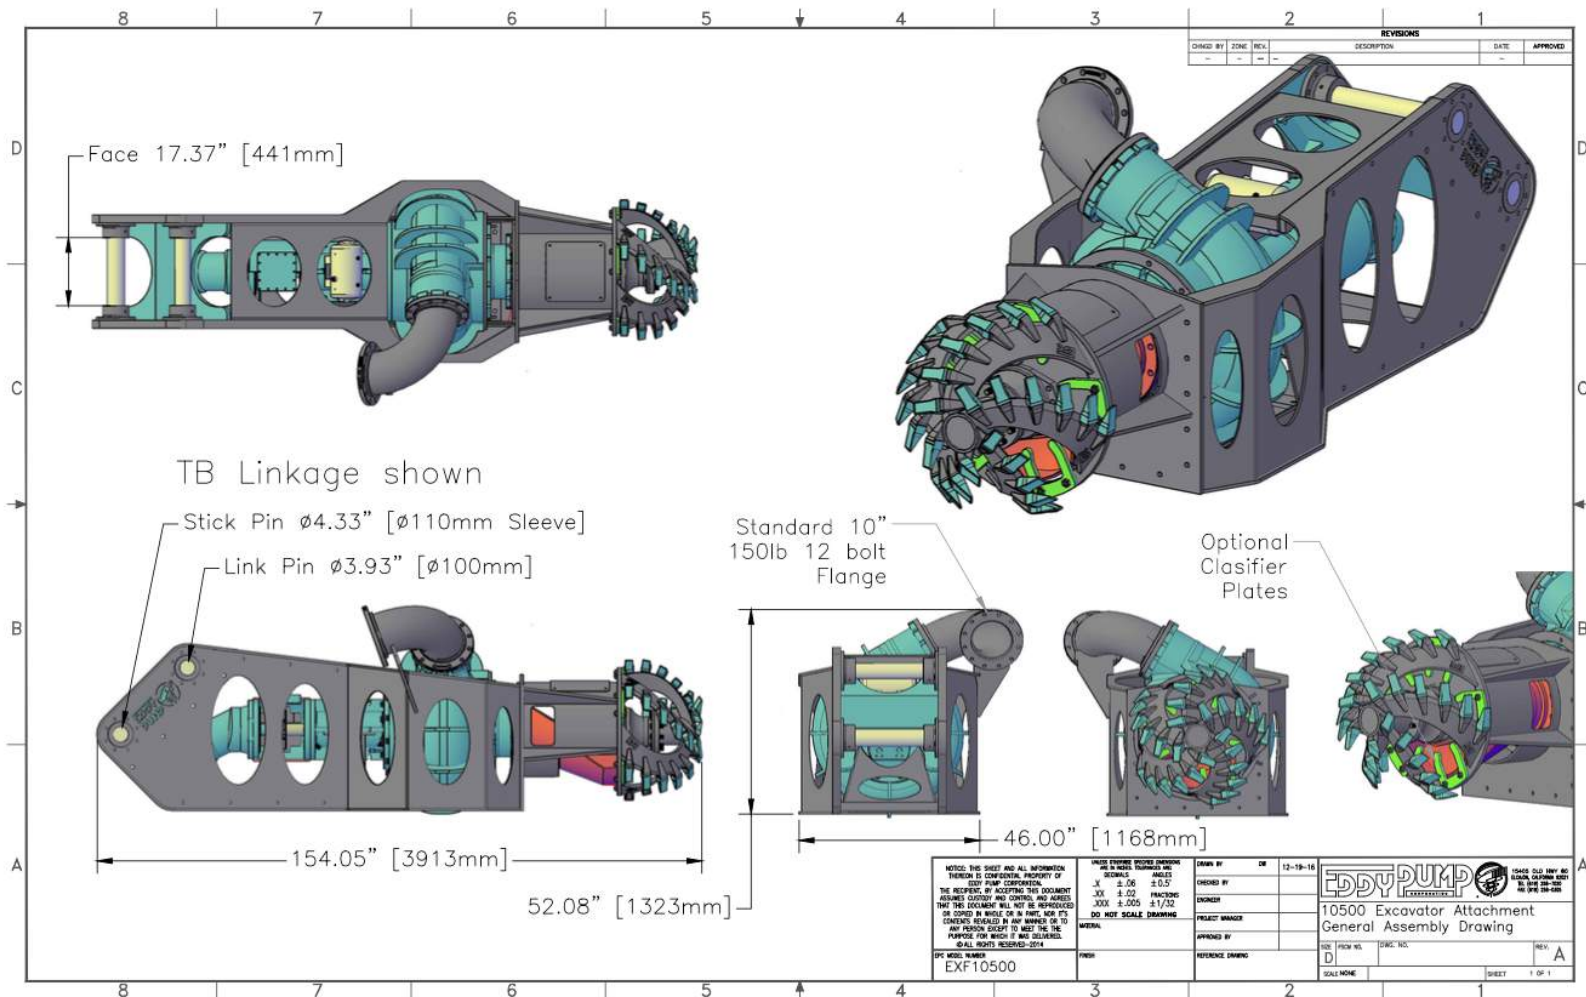



Name	Stick (mm)	Link (mm)	Face (mm)	(mm)	Type
307	45	45	186	306	XB
312 A Linkage	65	65	221	407	XB
315	70	70	281	463	XB
B Linkage	80	80	311	445/485	XB
S Linkage	80	80	311	485/512	XB
C Linkage	80	80	351	485/512	XB
CB Linkage	90	90	351	485/512	BF
D Linkage	90	80	385	485/512	XB
DB Linkage	100	90	385	500/528	BF
E Linkage	100	80	425	587	XB
F Linkage	100	80	441	587	XB
G Linkage	110	90	501	635	XB
TB Linkage	110	100	441	587	BF
UB Linkage	120	110	501	635	CF
V Linkage	110	90	501	630	XB
W Linkage	130	100	551	585	XB
VB Linkage	120	110	501	630	CF
WB Linkage	130	120	551	650	CF
H Linkage	130	100	551	585	XB
J Linkage	130	110	651	675	XB
HB Linkage	130	120	551	615	CF
JB Linkage	130	130	651	675	CF

**For questions contact an EDDY Pump Sales Representative at 619-258-7020**